



ÇİFT KOL ŞOK EMİCİLİ
BRAİDED LANYARD
TWIN-LEG SHOCK
ABSORBING BRAİDED
LANYARD

KULLANIM KILAVUZU USER GUIDE



1

DMN -7

(TR) Çift Kol Şok Emicili Braided Lanyard

(EN) Twin Leg Shock Absorbing Braided Lanyard

EN 355:2002

Test Eden Onaylı Kuruluş / ested by Notified Body

AUVA -STP

Adalbert - Stifter Strasse 65

1200 Wien /Austria

T : +43(0)5 93 93 - 21776

M: stp@auva.at

F : +43(0)5 93 93 - 21783

2

(TR) Etiket

(EN) Label

ÇİFT KOL ŞOK EMİCİLİ BRAİDED LANYARD
TWIN-LEG SHOCK ABSORBING BRAİDED LANYARD

Malzeme / Material: %100 Polyester

Çap / Diameter : 12 mm

Uzunluğu / Length : m

Ü. Ay-Yıl / M. Month-Year :

Maximum Length:2m

Seri No / Serial No :

CE 0082 EN 355:2002

DMN-7



3

(TR) Emniyet Kemerinde Ankaj Noktasının Seçilmesi (Şekil-1)
(EN) Choosing Harness Anchor Point (Figure-1)



H.1 - Göğüsten Kullanım A Ankraj Noktası (Şekil - 1.1)
Use of Sternal A Attachment Point (Figure -1.1)


H.2 - Sırttan Kullanım A Ankraj Noktası (Şekil - 1.2)
Use of Dorsal A Attachment Point (Figure -1.2)

4

(TR) Lanyard Kullanımı
(EN) Using Lanyard

I.1- Darbe Kuvvetinin en aza indirilmesi – Bir Düşüşte Oluşan Enerjinin Sönümlemesi (Şekil-2)

The minimization of impact forces - absorbtion of the energy of a fall (Figure -2)

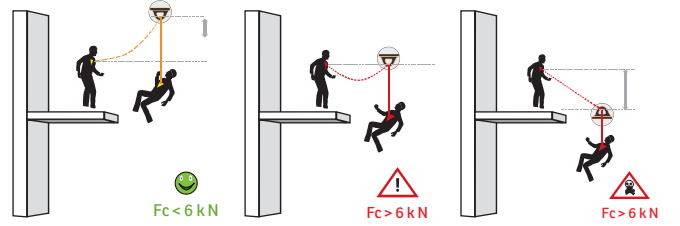


I.1.1 - Düşme Faktörü 0,5
Fall Factor 0,5

I.1.1 - Düşme Faktörü 1,0
Fall Factor 1,0

I.1.1 - Düşme Faktörü 2
Fall Factor 2

5


(TR) Şok Emicili Lanyard Kullanımı
(EN) Using Energy Absorber With Lanyard

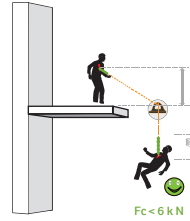

J.1 - Düşme Faktörü 2
Fall Factor 2

6

(TR) Güvenli Düşüş Açıklığı Mesafesi (Şekil-3)
(EN) Fall Clearance Distance (Figure-3)

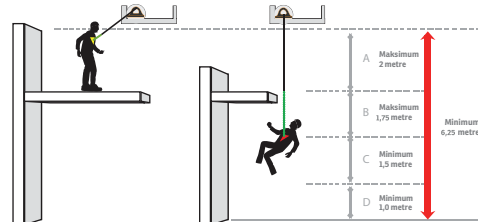

HER KULLANIMDAN ÖNCE VE SONRA DÜZENLİ KONTROL

TARİH	ONAY	KONTROL	NOTLAR

1- Kullanım Alanı

Kişisel Koruyucu Donanım (KKD)

Şok Emicilli lanyard düşüş durdurma sisteminin bir parçasıdır. Şok emicilli lanyard bir ucu emniyet kemerinde A ile işaretli D halkasına ve diğer ucu emniyet alınacak ankraj noktasına bağlanılarak kullanılır. Şok emicilli lanyardın boyu maksimum 2 m dir. Şok emicili düşüş sonucunda kullanıcının vücuduna gelecek darbe kuvvetini sönümleyerek 6 kN (600 kg) altında kalması için tasarlanmıştır. Şok Emicilli Lanyard 2016/425 (EU) Regülasyonu direktifinde EN 355:2002 normlarına uydur.

2- Sorumluluk

2.1 Bu ürünü kullanmadan önce kullanım kılavuzunu okuyunuz ve anladığınızdan emin olunuz. Kullanım amacına yönelik özel eğitim alınması gerekir.

2.2 Yüksekte çalışma; ciddi yaralanmalara ve ölümlere yol açabilecek tehlikeli aktivitelerdendir.

Uygun kullanım tekniklerini ve güvenlik yöntemlerini öğrenmek ve pratikte uygulamak kullanıcının sorumluluğu altındadır. Bu şok emicilli lanyardın yalnızca bu konuda eğitim almış uzman personel tarafından veya bu personelin gözetimi altında kullanılmalıdır. Yanlış kullanım ya da uygun olmayacak şekilde kullanılması halinde ciddi yaralanmalara ve ölümcül kazalara neden olabilir.

* Yüksekte çalışma sırasında oluşabilecek herhangi bir acil durumda uygulanmak üzere bir kurtarma planı olması gerekmektedir.

* Bu şok emicilli lanyard tasarımı dışında kullanılmamalıdır. Bu donanım tek başına yüksekte çalışmak için uygun değildir. Bu donanım ile beraber CE sertifikalı emniyet kemeri (EN 361), karabinalar (EN 362), düşüş tutucular (EN 360) v.b. ekipmanlar ile beraber kullanılması zorunludur.

* Bu ürün minimum - 30 °C ve maksimum + 70 °C sıcaklıkları arasında kullanılmalıdır.

* Ürün üzerine düşüm atmayınız her düşüm ürün mukavemetini % 50 oranında azaltmaktadır.

3- Ham Madde

Bu Şok Emicilli Lanyardın;

* Tekstil aksamaları % 100 Polyester

* Metal aksamaları paslanmaz çelik

* Aksesuarları polyester, Polyamid veya PVC malzemeden imal edilmiştir.

4. Ürün Kullanımı: (EN 355:2002)

Uyarı

* Emniyet kemeriniz olası bir düşüşte yaralanma ihtimalini azaltacak şekilde bedeninize göre ayarlanmış olmalıdır.

* Karabinanızın ağızı her zaman kilitli olmalıdır ve ana ekseninde (mukavet en yüksek kullanım yönü) kullanılmalıdır. Tercihen otomatik kilitli karabinaların kullanılması karabinanın ağızının her zaman kilitli olmasını sağlayacaktır.

* Çalışırken keskin ve aşındırıcı kenarlara temaslardan kaçınınız.

4.1 Hazırlık

Her zaman şok emicilli lanyard tercih etmeniz önerilir.

* Lanyard uçlarında çift emniyetli ve geniş ağızlı karabina tercih edilmesi daha rahat çalışmanızı sağlar.

* Eğer bir yerde sabit çalışmayacak ve çalışma sırasında sağa-sola, yukarı-aşağı hareket etmeniz gerekiyor ise her zaman çift kol şok emicilli lanyardı tercih ediniz.

4.2 Montaj (Şekil-1)

* Şok emicili ucundaki karabina emniyet kemerinizin sadece göğüste veya sırtta A ile işaretli düşüş durdurma bağlantı noktasına (EN 361) bağlanmalıdır.

4.2.1 Kemer A bağlantı noktasının seçilmesi

Düşüş tehlikesine karşı düşüş sonrası çarpma riski bulunan materyeller vücudunuzun ön tarafında ise şok emicilli lanyardınızı **Şekil -1.1'**deki gibi emniyet kemerinizin göğüs bölgesinde bulunan A Ankraj noktasına, eğer vücudunuzun sırt tarafında ise şok emicilli lanyardınızı **Şekil-1.2'**deki gibi emniyet kemerinizin sırt bölgesinde bulunan A ankraj noktasına takarak kullanınız.

4.3 Yükümlülükler

* Şok emicilli lanyardınızın boyu karabinalar dahil maksimum 1,2 m kullanmanızı öneririz. Yasal olarak maksimum boy 2 m dir.

* Düşüş mesafesinin 2,4 m den daha fazla olmamasına dikkat edilmelidir.

* Şok emicilli lanyard ile çalışırken emniyet noktası olarak kullandığınız yüzeyin eğiminin 15 ° den fazla olmaması gerekmektedir. 15 ° den daha fazla eğimli yüzeylerde düşüş 2,4 m den daha fazla olabilir.

4.4. Ankraj (Güvenli Emniyet) Noktası

Emniyet alınan ankraj noktası veya sistem her zaman kullanıcının üzerinde bir noktadan olmalıdır ve sistem EN 795 standardına uygun ve minimum mukavemeti 12 kN (1.200 kg) olmalıdır.

4.5 Şok Emicilli Lanyard Kullanımı

* Şok emicili maksimum bir düşüşte oluşan enerjiyi özel olarak hazırlanmış kolonunun yırtılmasıyla sönümler darbe kuvvetini 6 kN altına indirir.

* Şok emicinin düşüş sonrası yırtıldıktan sonraki boyu 1,75 m'dir.

* Şok emicilli lanyard ile çalışırken kullanıcı üzerine gelecek darbe kuvvetinin en aza indirilmelidir. Bir düşüş sonrası oluşacak darbe kuvvetinin (Fc) en az olması için **Şekil-2'**ye bakınız.

4.6. Güvenli Düşüş Açıklığı Mesafesi (Şekil-3)

Şok emicilli lanyard ile çalışırken ankraj alınan nokta ile düşüş sonrası çarpma riski bulunan engel veya zemin arasındaki minimum açık yükseklik minimum 6.25 m olmalıdır.

Güvenli Düşüş Açıklığı Mesafesi hesaplamak için Şekil-3'e bakınız.

Güvenli Düşüş Açıklığı Mesafesi = A+B+C+D

A - Şok emicilli lanyardın uzunluğu

B - Şok emicinin yırtıldıktan sonraki uzunluğu

C - Kullanıcının yüksekliği (bağlantı alınan A noktası ile ayak arası)

D - Kullanıcının çarpacağı engel veya zemin ile arasında olması gereken emniyet yüksekliği.

Güvenli Düşüş Açıklığı Mesafesi = A+B+C+D

= 2 + 1,75 + 1,5 + 1

= 6,25 metre olmalıdır.

5. Ürün Kontrolü ve Doğrulama

5.1 Her kullanımdan Önce

Yüksekte çalışma ürünleri kişiye özel olarak kullanılmalıdır. Bu ürünler her kullanımdan önce ve sonra düzenli bir şekilde kontrol edilmeli ve tespit edilen bilgiler ürün kontrol defterine kayıt edilmelidir. Bu kontroller ışığın yeterli olduğu bir ortamda yapılmalıdır. Ürünü düz bir zemin üzerine yayınız ve ürünü aşağıdaki kontrol kriterlerine göre kontrol ediniz.

* Dokuma kolonlarının veya halat renklerinin değişip değişmediğini

* Dokuma kolonlarının veya halat üzerinde bir yıpranma olup olmadığını

* Dikişlerin ve bağlantı noktalarının kontrolü (dikişler sökülmemiş olmalıdır)

* Metal aksamaların kontrolü (metal üzerinde çatlaklar, şekil bozuklukları, paslanma, v.b.) Yüksekte çalışma donanımlarının kontrolünde yukarıdaki maddelerden birinde bir bozukluk görüldüğünde ürün üreticiye gönderilip tavsiyesi alınmalı veya ürün kullanımdan kaldırılmalıdır. Ürün üzerinde görülen bozulmalar kesinlikle tamir edilmemelidir, bu konuda yalnızca üreticinin yönlendirmesi ile hareket edilmelidir.

5.2 Her kullanım sırasında

Kullanım sırasında ürün bir sistem ile beraber kullanıldığında, tüm sistemin doğru kullanıldığını kontrol etmek çok önemlidir. Sistem içindeki tüm ekipmanların bir diğer ekipmana göre doğru konumlandığından emin olunuz.

6. EN 365 Standardına ilişkin genel bilgilendirme

6.1 Kurtarma Planı

Ürün kullanımı sırasında her hangi bir zorluk ile karşılaşılması durumunda kazazedenin çok hızlı bir şekilde kurtarılması için bir kurtarma planının hazırlanmış olması zorunludur.

Kullanılan şistemdeki ankraj noktası mutlaka kullanıcı konumunun

6.2 Ankraj noktası

üzerinde olması gerekmektedir ve bu nokta EN 795 standardına uygun olmalıdır. EN 795 standardına göre ankraj noktası minimum 12 kN mukavemetinde olmalıdır.

6.3 Çeşitli Durumlar

- * Bir çok emicili lanyard sadece bir düşüşte bedenin düşüşte korunmasını sağlamak amacı ile kullanılmaktadır.
- * Bir düşüş durdurma sisteminde, her kullanımdan önce bir düşüş durumunda kullanıcının zemine veya başka bir yüzeye çarpmasını engellemek için kullanıcının altındaki mesafenin ölçülmesi gerekir.
- * Birçok ürün beraber kullanıldığı zaman tehlikeli bir durum ortaya çıkabilir. Bunun için bir ekipmanın güvenlik fonksiyonunun diğer ekipmanın güvenlik fonksiyonunu tehlikeye atmamalıdır.
- * Kullanıcı tıbben yüksekte çalışmaya uygun olmalıdır. Emniyet kemerinin ölümcül kazalara neden olabileceğine dair uyarılmalıdır.

7. Knot Genel Bilgilendirme

7.1 Ürün Ömrü

* Ürününüzün raf ve kullanım ömrü 10 yıldır. (Bu ömür ürünün rafta hiç kullanılmadan bekleme süresidir, ürün bu süre içinde hiç kullanılmamış olsa bile imha edilmektedir.)

Aşağıdaki durumlarda ürün üreticiye geri gönderilmeli veya imha edilmelidir;

- * Ürün bir düşüş yaşamış ve yüke maruz kalmışsa
- * Ürün ömrü 10 yılın üzerinde ise (tekstil veya plastik aksamlar dan üretilen ürünler için)
- * Ürün bir kontrol sırasında kullanıma uygun bulunmadı ise ve sizin bundan bir şüphemiz var ise,
- * Eğer ürünün tüm kullanım geçmişini bilmiyorsanız,
- * Ürün standardında, yasalarda, kullanım tekniğine uyumu ile ilgili bir değişiklik ve benzeri durumlarda.

7.2 Ürün Depolanması:

- Ürün kendi özel çantasında ve kullanım kılavuzu ile birlikte, üzerinde modeli, standardı yazılı olarak satışa sunulmuştur. Ürünü kendi çantası içinde muhafaza ediniz. Ürünün depolama alanlarında aşağıdaki kriterler göz önünde bulundurulmalıdır;
- * Kuru bir yerde, güneş ışığına doğrudan maruz kalamayacak şekilde, oda sıcaklığında saklanmalıdır.
 - * Depolama alanında (asitler, solventler v.b.) ürüne zarar verecek maddelerden uzak tutulmalıdır.
 - * Ürün ısı kaynaklarından uzak tutulmalıdır.
 - * Ürün depolama sırasında rutubetlenmiş ise oda sıcaklığında kurutulduktan sonra kullanılmalıdır.

7.3 Ürün Bakımı

- * Ürüne her kullanımdan sonra bakım yapmak ürünün kullanım ömrünü uzatır. Ürünün zarar görmemesi için maksimum 30°C de su ile minimum pH 5,5 ve üzeri olan deterjan ile yıkadıktan sonra oda sıcaklığında kurutunuz. Ürün direkt bir ısı kaynağına maruz bırakmayınız. Ürünü solvent veya kimyasallar ile temas ettirmeyiniz.

7.4 Değişim ve Tamir

- * KNOT 'tan önceden yazılı izin alınmadan ürün üzerinde herhangi bir değiştirme, tamir veya ekleme yapılmamalıdır. Ürün üzerinde herhangi bir tamirin sadece üretici (KNOT) tarafından yapılabilir. Aksi takdirde oluşacak tehlikelerden KNOT sorumlu değildir.

1. General Specification

Personal Protective Equipment (PPE)

Engery Absorber Lanyard is a part of the fall arrest system. Engery Absorber Lanyard should be used with a safety harness during work and lanyard should be connected to a safe anchorage point. Engery Absorber Lanyard is designed for works at 2 m height maximum and limit the impact force on the user at 6 kN (600 kg) in case of a fall. During working at height with energy absorber, special textile of the energy absorber starts tearing when the force on the energy absorber approaches to 6 kN and limits the impact transmitted to the user in case of a fall. This lanyard with energy absorber, is in comply with standard of EN 355:2002 and specified in the PPE Regulation (EU) 2016/425.

2. Responsibility

- * Before using this equipment you must read and understand this instruction.
- * Working at height is one of the most dangerous activities that can lead to serious injuries and death.
- It is under the responsibility of the user to learn and apply it in practice of an appropriate techniques and safety methods. This Lanyard with energy absorber should be used by only a trained personnel or under the supervision of such personnel. Improper use can cause serious injuries and fatal accidents.
- * There must be a plan of rescue that is to be applied in case of emergency which can occur during working at height.
- * Engery Absorber lanyard is a component of a fall arrest system and is aimed to prevent user from falling. This enhancement itself is not suitable for working at height, it must also be used together with CE certificated harnesses (EN 361), hooks (EN362) and fall arresters(EN 360).
- * This product must be used between - 30 °C and + 70 °C air conditions.

3. Raw Material

This Engery Absorber Lanyard is made of;

Textile Materials: % 100 Polyester

Metal Parts: 304 or 316 Stainless Steel

Accessories: Polyester or Polyamide or PVC

4. INSTRUCTIONS FOR USE (EN 355:2002)

Caution

- * Harness should be adjusted according to your body in order to prevent the possible injuries in case of a fall.
- * Carabiners should be locked and carabiners with automatic lock should be preferred.
- * Avoid contact with sharp and abrasive surfaces while working.

4.1 Preparation

- * Usage of lanyard with energy absorber is always advised.
- * Double safe carabiners with wide mouth opening located on the tips of lanyard provide ease at work.
- * Two-leg lanyard with energy absorber should be preferred for work if the work at height is not at a fixed point but includes moving left – right and up - down.

4.2 Connection (Figure-1)

- * Connect your energy absorber with lanyard only to the anchorage point located on your chest or, if not present, to the anchorage point (EN 361) located at the back.

4.2.1 Choosing Harness A Attachment Point (Figure-1)

- * Connect your lanyard with energy absorber only to the anchorage point located on your chest or, if not present, to the anchorage point (EN 361) located at the back.
- As shown on figure-2.1, connect your lanyard to the sternal A anchorage point if there is a chance of hitting obstacles in front in the case of a fall. As shown on figure-2.2, connect your lanyard to the dorsal A anchorage point if there is a chance of hitting obstacles at the back in the case of a fall.

4.3 Obligations

- * Advised length of the lanyard with energy absorber should be 1.2 meters maximum including the carabiners. Legally maximum length of the lanyard is stated as 2 meters.
- * Fall distance should not be more than 2.4 meters.
- * While working with the lanyard with energy absorber, slope of the working surface which is used as an anchorage point should not exceed 15°. Surfaces exceeding 15° of slope might cause falls more than 2.4 meters.

4.4 Anchorage Point (EN 795:2012)

Anchorage point or the system should always be secured at a point above the user; it should have a minimum 12 kN strength and should be in accordance with EN 795 standard.

4.5 Using Energy Absorber with Lanyard

- * It must be ensured that the impact force is less than 6 kN in the event of a fall.(see Figure-2)
- * Engery Absorber Lanyard is designed for works at 2 m height maximum and limit the impact force on the user at 6 kN (600 kg) in case of a fall. During working at height with energy absorber, special textile of the energy absorber starts tearing when the force on the energy absorber approaches to 6 kN and limits the impact transmitted to the user in case of a fall.
- * The length of energy absorber after tearing is 1,75 meter.

4.6 Fall Clearance

- * Fall clearance is the minimum length required to prevent an impact with the ground in case of a fall. Fall Clearance is defined as necessary distance between the anchorage point and the ground (or first obstacle) to avoid crashing into the ground in case of a fall.
- * Fall length in between the anchorage point and the ground should be minimum 6,25 meters.

Elements needed to calculate fall clearance are;

- A - Length of the Energy absorber with lanyard
- B - Energy Absorber Extension
- C - Height of User
- D - Safety Margin

5 Control of product and validation

5.1 Before Each Use

Working at height equipment must be personalized. These products must be controlled on a regular basis before and after each use. Findings must be recorded into product record book. On an adequate lighted environment, by lying the product on a flat surface, apply the following controls;

- * Webbing or ropes should be checked for cuts, abrasions, color change, broken stitches and undue stretching
- * Metal parts should be checked for signs of wear, cracks, deformation, corrosion or other damage.
- * Connectors should be checked for sign of wear, cracks, deformation, corrosion, dirt. The gate and the locking mechanism should work without any problem. The gate should open and close completely.
- * Labels should be secure and legible.

During the controls if at least one of these deviation is found, usage of the equipment should be suspended or retired and immediately send back to producer for detailed inspection. No repair is allowed by unauthorised person. Only producer's directions should be applied.

5.2 During each use

During the working at height if you need to use this product connected with other systems, make sure that all pieces of equipment in the system are correctly positioned with respect to each other.

6. Supplementary information regarding standard; EN 365

6.1 Rescue Plan

A worker who has been incapacitated by an injury or medical condition and who is suspended by the full body harness must be rescued immediately. So you must always have a rescue plan for such emergencies. Adequately trained personnel and rescue equipment must be present for rescue.

6.2 Anchor Point

The anchor point of the system comprises this product should preferably be located above the user or should at least located at the waist level of the user. An attachment point below this level will cause a serious injury or death. The anchor point must conform to the requirements of the EN 795 standard and the minimum strength of it must be 12 kN.

6.3 Various Situations

- * An energy absorber lanyard is the only device allowed for supporting the body in a fall arrest system.
- * In a fall-arrest system, it is essential to check the required clearance under the user before each use, to avoid any impact with the ground or an obstacle in case of a fall.
- * Make sure that the anchor point is correctly positioned, in order to limit the risk and the height of a fall.
- * When using multiple pieces of equipment together, a dangerous situation can result if the safety function of one piece of equipment is affected by the safety function of another piece of equipment.
- * Users must be medically fit for activities at height. Warning, inert suspension in a harness can result in serious injury or death.
- * The instructions for each item of equipment used in conjunction with this product must be read carefully.
- * The instructions must be provided to users of this equipment in the language of the country in which the product is to be used.

7. General Information

7.1 Life Span

This product's maximum lifetime is 10 years. (10 years is the time of storage without being used, the product should be destroyed even if it has never been used during this time)

If the product has one of the deviations below, it should be withdrawn from service immediately and should be destroyed to prevent further use.

- * It has suffered a high shock load or has had a load dropped on to it.

- * There are discoloration, stiffness, cuts and tears, glazed or fused areas on the webbing or ropes.
- * There are cracks, deformation, corrosion, excessive wear on the metal parts.
- * It fails to pass inspection (before use or detailed inspection)
- * Labels (markings) are illegible or absent
- * It is extremely dirty does not respond to normal washing.
- * It has come into contact with chemicals and especially acids or is even suspected.
- * Its history is unknown.
- * Its life time stated in the user's manual has expired even it has never been used.
- * There is a slightest doubt that the products is no more safe and reliable.

7.2 Storage

Product is sold with storage bag and user guide. Additionally model and applied standards are supplied on the product. During the storage keep the product in it's own bag. Storage area of the product should meet following requirements;

- * Dry, away from direct sun light, room temperature
- * Do not store together with acid, solvents etc.
- * Keep away from direct heat sources.
- * If the product humided during the storage, dry the product in room temperature before usage.

7.3 Maintenance

Personal protective equipment should be maintained regularly to help make sure that the equipment will operate properly when needed.

To clean your Lanyard with energy absorber you can wipe with a wet sponge. For difficult stains you can use a mild soap and warm water not exceeding 30°C. After cleaning it should be thoroughly rinsed in clean, cold water and hung up to dry in a cool place away from direct heat sources. Lanyard with energy absorber should be hung up or placed loosely in a bag or other container to protect it from exposure to harmful fumes, corrosive agent or light (artificial or sunlight).

Do not use acidic or solvent chemicals!

7.4 Changes and repair

- * Changing a part, repair and addition to any component to product is strictly forbidden without written authorisation of KNOT. Any repair to our products can be made only by us (KNOT). Otherwise KNOT has no responsibility.

7.5 Transportation of product

The product should be transported in a bag, protecting from humidity, chemicals and connecting to any solid parts.

7.6 Periodic Inspection of product

Lanyard with energy absorber should be inspected by the user before each use and an additional detailed inspection must be carried by a competent person (preferably to producer) other than the user at intervals of no more than 1 year (12 months).

During the inspection of product following information should be recorded;

- * Type of the product, model, contact information of producer, serial number, date of production, date of purchase, date of first use, next inspection date, problems, recommendations, name and surname of inspector. For further information visit www.kayasafety.com

7.7 Guarantee

This product has 10-year guarantee against all material or manufacturing defects under proper usage and storage conditions. Guarantee will be void if; product is misused, torn, cut, corroded, unauthorised repair of changes on the product, damaged by accidents.

8. Certification

This product is certified in accordance with PPE Regulation 2016/425 Module B SATRA Technology Europe Ltd, CE 2777 Notified Body after tests according to EN 355:2002.

Producer: KNOT YAPI VE İŞ GÜVENLİĞİ SANAYİ TİCARET A.Ş.

Address: Cevizli Mah. Tugay Yolu Cad. Nuvo Dragos Sit. No:12/A Blok
K:11 D:120 Maltepe / İSTANBUL

T: + 0216 377 13 13

F: + 0216 377 54 44

E: info@knot.com.tr

W: www.knot.com.tr

Producer: KNOT YAPI VE İŞ GÜVENLİĞİ SANAYİ TİCARET A.Ş.

Address: Hamidabat Köyü Çayırılık Kuru Boyu Mevkii Lüleburgaz/KIRKLARELİ

T: + 0288 473 40 20-21

F: + 0288 473 40 10

E: info@knot.com.tr

W: www.knot.com.tr